


INSTALLATION INSTRUCTIONS FOR A PREHUNG ALUMINUM STORM DOOR

Before you begin installation

- 1 All Everlast Storm doors are Pre-Hung (Hinged Left or Hinged Right). Ensure your door is hinged correctly.

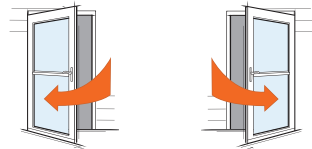


Left Hinge

Right Hinge

(Handing is always viewed from outside.)

- 2 Follow the measuring guide below to ensure you have a correct sized door.

- 2a Measure the width of the door opening on the inside face of the brickmould at the top, center and bottom. Record the shortest measurement. (see measure points W1, W2 & W3 in the illustration)
- 2b Measure the height from the bottom of the door sill to the under-side of the brickmould at the top. (see measure point H in the illustration)
- 2c The box sweep at the bottom of the storm door allows a 1/2" expansion. The door will be manufactured to allow a 1/4" adjustment up or down from the measurement provided.

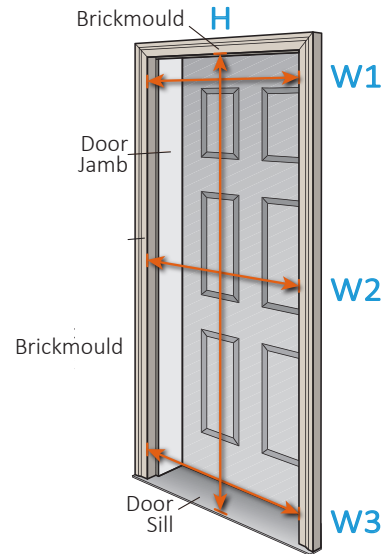

Measured Opening	Required Size
31 3/4" - 32 1/4"	32"
32 3/4" - 33 1/4"	33"
33 3/4" - 34 1/4"	34"
35 3/4" - 36 1/4"	36"

- 3 Remove the packaging from the door and ensure that you have all the parts listed below.

- 3a The Header Z-Bar should be attached at the top of the door.
- 3a The storm door hardware box can be found taped to the top of the Header Z-Bar.
- 3b The Hinge Side Z-Bar should be attached to the door with hinges.
- 3c The Handle Side Z-Bar should be secured with shipping clips. **Do not remove the shipping clips at this point.**
- 3d The box sweep should be attached at the bottom of the door. **Do not remove or adjust the box sweep at this point.**



INSTALLATION INSTRUCTIONS FOR A PREHUNG ALUMINUM STORM DOOR

Installing the Storm Door

- ① Take an outside measurement of the opening heights of where the storm door is being installed (hinge side and handle side).
- ② Cut both Hinge Side Z-Bar and Handle Side Z-Bars (from the bottom) to the measured height just taken. Cut at a slight slope to the outside in order to follow the slope of the entry door sill.
- ③ Place storm door into the opening and push the hinge side of the door tightly against the jamb. Make sure the door is square. Secure the Hinge Side Z-Bar with screws provided.
- ④ Install all the screws on the Hinge Side Z-Bar and the Header Z-Bar. The installation holes are all pre-drilled.
- ⑤ Remove the pre-hung shipping clips (2 of them) that are located on the top and bottom of the Handle Side Z-Bar
- ⑥ Open the door and make sure it is fitting into your opening properly. If it is not square you can adjust the Hinge Side Z-Bar accordingly.
- ⑦ Install 2 screws to fasten the Hinge Side Z-Bar to the jamb. The installation holes are pre-drilled.
- ⑧ Install all the screws on the Handle Side Z-Bar with the screws provided. The installation holes are pre-drilled.
- ⑨ Adjust the box sweep up or down with the 3 pre-installed box sweep screws. Leave a 1/16" gap between the rubber fins and the entry door sill.

Installing the Storm Door Hardware

- ① Install the handle set following the instructions provided in the hardware box.
- ② Install the Wind Chain following the instructions provided in the hardware box. The Wind Chain must always be installed at the top of the storm door. It should be mounted to allow a 90-degree opening.
- ③ Install the Door Closer Pump following the instructions provided in the hardware box. Depending on the style of the door, the Door Closer Pump should be installed on the mullion above the bottom kick plate. On a Full View model, the Door Closer Pump is to be installed directly onto the bottom door rail.

